



## Solis / SOFAR Pylontech Battery & Inverter Restart Procedure

1. Turn off the battery/batteries using the power on/off toggle switch on the top of the battery module. *(shown below)*



2. Turn off the AC isolator rotary switch. This is mounted on the wall near/next to the inverter. *(shown below)*



3. Turn off the DC isolator switch. This is located on either the *(shown below)*



4. Wait at least 30 seconds.
5. Turn the battery/batteries back on.
6. Press and hold the red "SW" button on the master battery (it is the battery with an empty LINKPORT 0) for 5 seconds.
7. Turn the AC isolator back on.
8. Turn the DC isolator switch back on.

The inverter screen will illuminate, and the procedure will be complete!