

# Advanced setting

2. Advanced Setting	<b>Input Password 0715</b>
Up" ↑	1. Battery Parameter
	2. Clear Energy Data
	3. Clear Events
"Down" ↓	4. Country
	5. Anti Reflux
	6. IV Curve Scan
	7. Battery Active
	8. Logic interface Control
	9. Safety Param.


Select "2. Advanced Setting" and press "OK", "input password" is shown. Input the password "0001", press "Up" or "Down" to change the 1<sup>st</sup> digit, press "OK" to switch to next digit, when "0001" is shown on the screen, press "OK" to enter "2. Advanced Setting" interface.

If "Incorrect, Try Again!" is shown on the screen, press "Back" and input the password again.

Go to



**7. Battery Active**

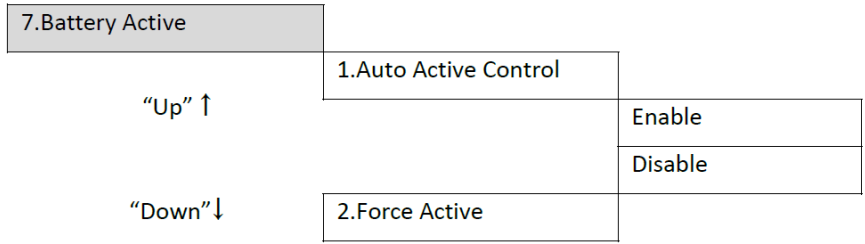

HYD-ES inverter can activate flat batteries when needed.

The user can enable "Auto Active Control" to allow HYD-ES inverter to activate flat batteries automatically. Or make HYD-ES inverter to activate the battery right away.